



XP1 DB25

f1	1	+6.3VDC1
f2	2	-6.3VDC1
f3	3	+6.3VDC2
f4	4	-6.3VDC2
f5	5	+6.3VDC3
f6	6	-6.3VDC3
f7	7	12.6VAC1
f8	8	12.6VAC2
f9	9	12.6VAC3
f10	10	12.6VAC4
+12v	11	+12VDC
rel	12	бл. выхода
GND	13	общ. серво
CNTR1	14	КОНТЛ la1
CNTR2	15	КОНТЛ la2
CNTR3	16	КОНТЛ la3
CNTR4	17	КОНТЛ la4
	18	
	19	
	20	
	21	
	22	
	23	
	24	
	25	

